

# POWERBRONZE

TRIUMPH SPEED TRIPLE 1050 12-15




PART NO: 430-U152

ISSUE 2 30.01.19

QTY	DESCRIPTION	OFFICE USE
1	Light Screen	Loc
1	Bracket	F031B
1	3M Cleaning Wipe	125
2	M5 x 20 socket screws	6
2	M5 x 50 socket screws	#46
2	M5 x 15 well nuts	11
2	15mm od x 6.3 id x 22.5mm long spacers (9003-F032)	#44
2	15mm od x 6.3 id x 10mm long spacers (9003-F033)	#45
1	800mm length of 3M tape	
1	Powerbronze sticker – small	#158



## CONTENTS (NOT TO SCALE)

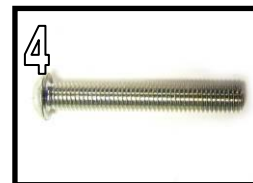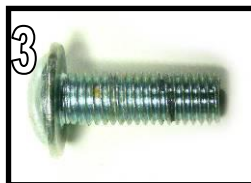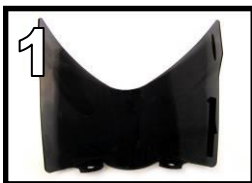


**REQUIRED:**  
Set of spanners  
Screwdrivers  
Sockets  
Allen Keys  
Clamps

**PLEASE NOTE: THIS LIGHT SCREEN IS DESIGNED TO BE FITTED ONTO THE TRIUMPH FLY SCREEN – THIS IS A TRIUMPH ACCESSORY AND WILL NEED TO BE PURCHASED FROM A TRIUMPH DEALER**

[www.powerbronze.co.uk](http://www.powerbronze.co.uk)

Telephone: 44 (0)1903 783222 Fax: 44 (0)1903 783333 sales@powerbronze.co.uk Powerbronze International Ltd reserve the right to change any specification without notice. These instructions are © Copyright of Powerbronze International Ltd and should not be reproduced in any form without permission


Fit well nuts to the holes in the Powerbronze screen

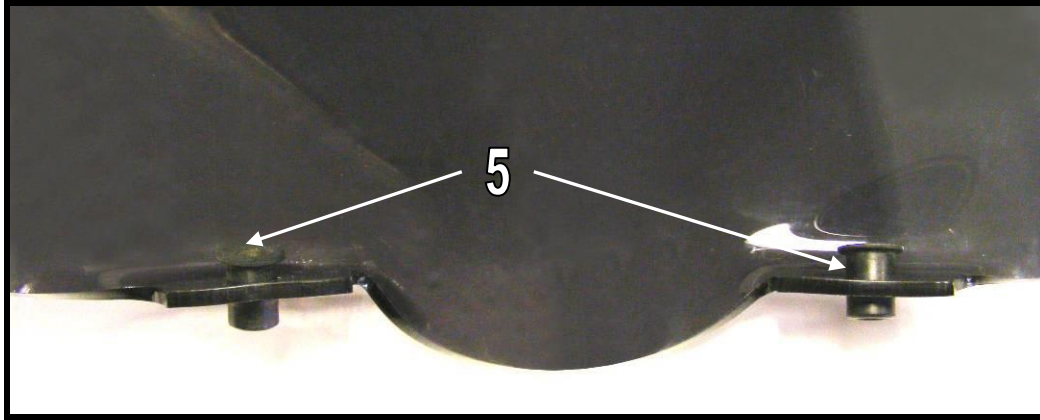

Place the bracket (2) on top of the well nuts with curve of bracket facing screen




Fasten using 2 x M5 x 20 socket screws (3)

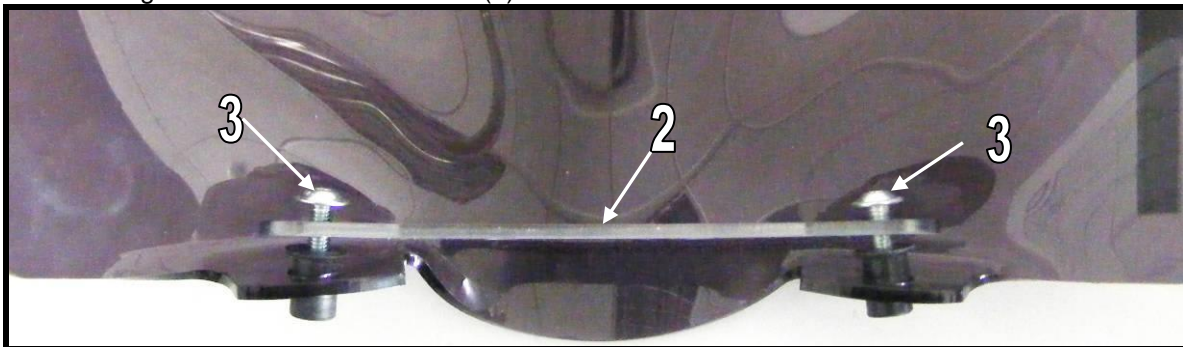

Using the cleaning wipe supplied, clean the underside of the instrument fairing and the top face of the screen

Cut 3M tape (8) into 8 lengths 90 mm long


Apply single strips to underside of instrument fairing and outside of screen as shown below  
Remove red backing.

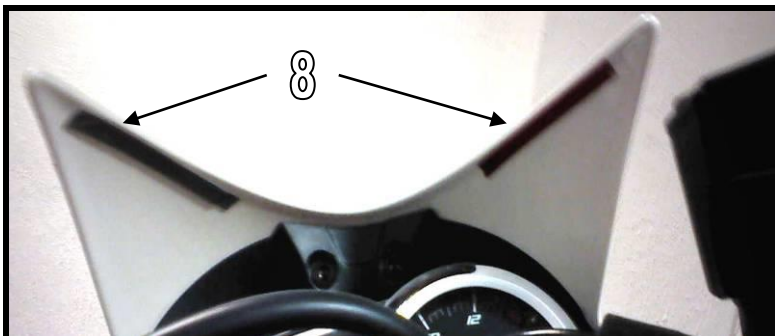

**Underside of instrument fairing**

[www.powerbronze.co.uk](http://www.powerbronze.co.uk)

Telephone: 44 (0)1903 783222 Fax: 44 (0)1903 783333 sales@powerbronze.co.uk Powerbronze International Ltd reserve the right to change any specification without notice. These instructions are © Copyright of Powerbronze International Ltd and should not be reproduced in any form without permission

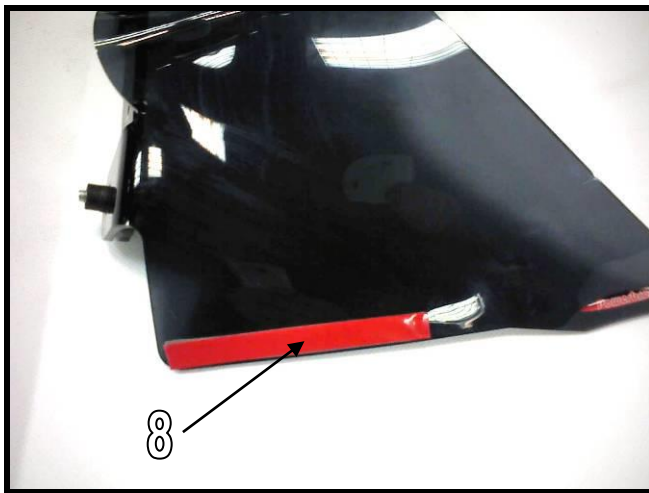

Outside edge of screen




Outside edge of screen

Then add another layer on top of fitted strips-double thickness

Remove the two centre screws from the instrument fairing

Insert the M5 x 50 socket screws through the centre holes of the bracket and fit the spacers

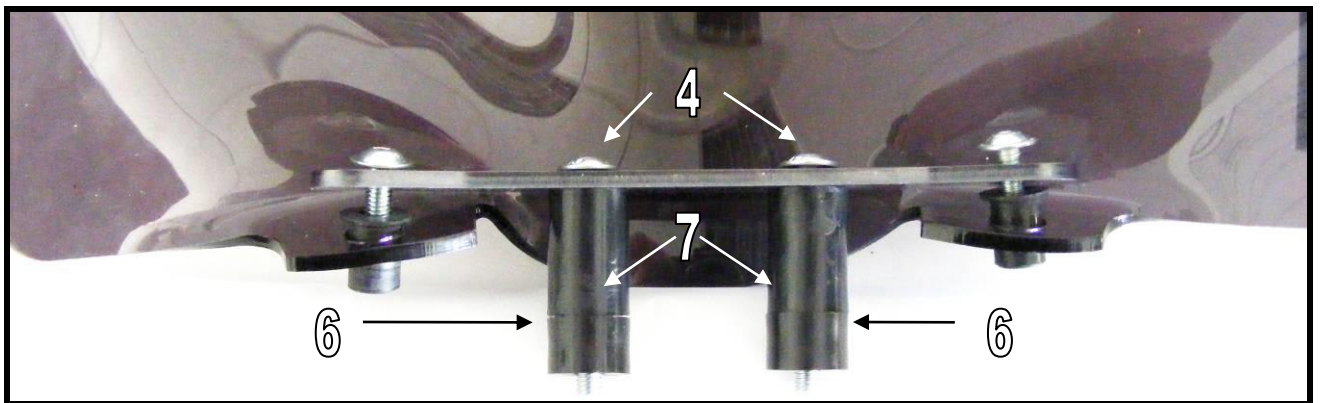

Peel backing from all double thickness tape strips, then fit screen and bracket assembly ensuring screen is aligned correctly with instrument fairing. Tighten all screws.

Ensure plastic surfaces are protected and apply clamps to press tape areas together.

Ensure a good bond is formed by leaving clamps on for as long as possible, 24 hours is recommended.

