

Honda Africa Twin 2016

H176/C - H180/C-LS - H181/DS-XDX



H176/C
Touring



H180/C-LS
Sport




H181/DS-XDX

Super Sport

Honda Africa Twin 2016

H176/C- H180/C-LS - H181/DS-XDX

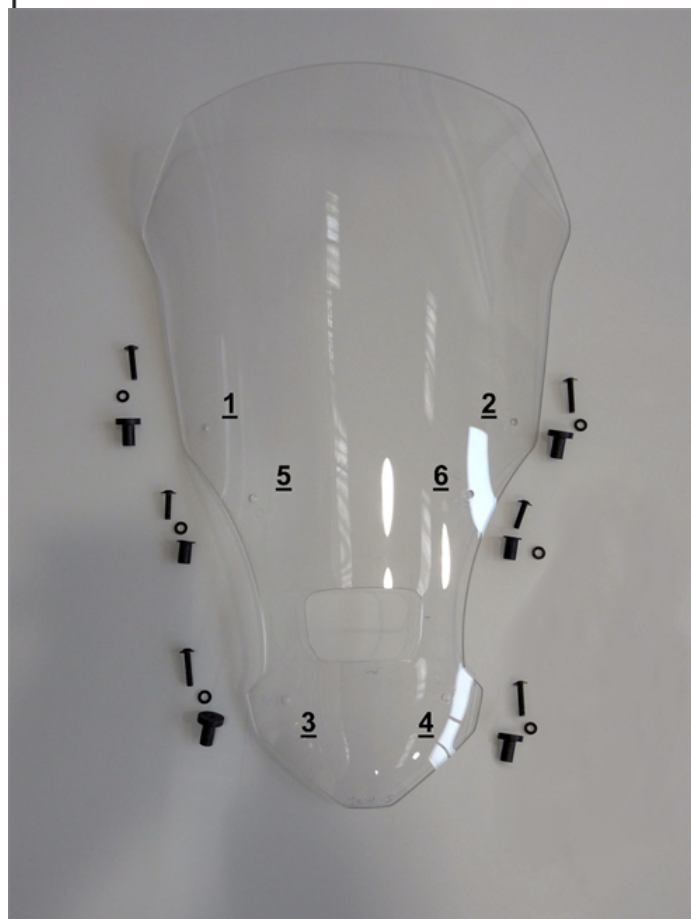

1) smontare il parabrezza originale ed i 4 gommini filettati

2) inserire per i fissaggi superiori (1 e 2) ed inferiore (3 e 4) i gommini grandi e per quello centrale (5 e 6) i gommini piccoli

3) per i fissaggi superiore ed inferiore usare viti M5x25 e rondella

4) per i fissaggi centrali usare le viti M5x20 e rondella

1) take off the original windshield and 4 original well nuts

2) Insert in upper fixing points (1 and 2) and in lower points (3 and 4) the big well nut and for middle points (5 and 6) the little well nuts

3) Upper and lower fixations: use bolts M5x25 and their plastic washers

4) middle fixations: use bolts M5x20 and their plastic washers

Descrizione / description	Q.tà / q.ty
well nut alti /thick well nut	4
well nut bassi / thin well nut	2
vite M5x20 / bolt M5x20	2
vite M5x25 / bolt M5x25	4
Rondella in plastica / plasti washer	6