




ASSEMBLAGGIO/FITTING METHOD

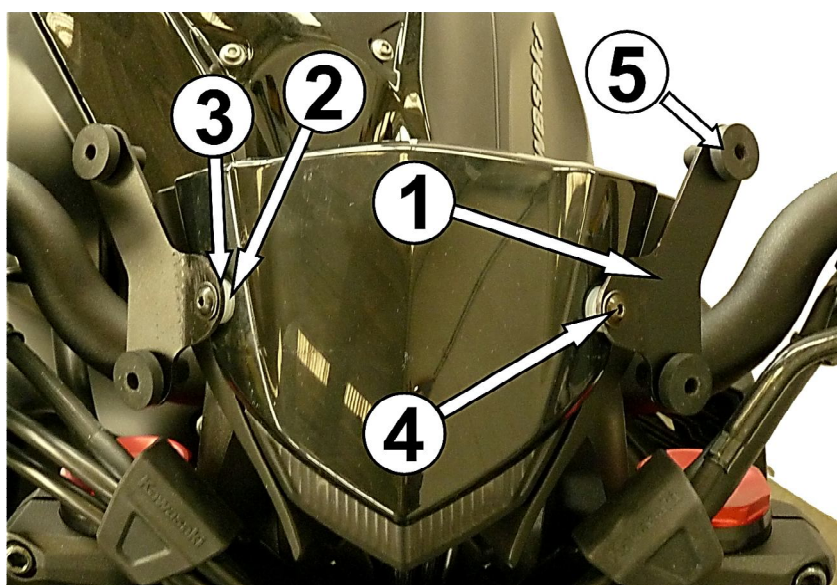

- 1) TOGLIERE LE DUE VITI ORIGINALI
- 2) POSIZIONARE I WELLNUT COME DA FIGURA A LATO INSERENDO LA RONDELLA IN NYLON BIANCO TRA CUPOLINO ORIGINALE, POI IL DISTANZIALE E LE PIASTRE .
- 3) STRINGERE LE VITI, POSIZIONANDO LE PIASTRE CIRCA IN POSIZIONE.
- 4) LE PIASTRE, ANCHE SE STRETTE, MANTENGONO UNA CERTA MOBILITA' PER CUI SI CENTRERANNO CON LE FORATURE DEL CUPOLINO.
- 5) POSIZIONARE IL CUPOLINO E SERRARLO CON VITI E RONDELLE DI NYLON IN DOTAZIONE

Descrizione/Description	Q.tà/Q.ty	Pos.
Piastra/plate	1+1	1
Rondella/washer Ø14x1 ø5	2	2
Distanziale/spacer Ø13x3 ø6,5	2	3
Vite/Bolt M5x20	6	4
Wellnut	4	5
Washer 10x5,2x1 nylon	4	6

- 1) Take out the original bolts.
- 2) Fit the brackets as shown in picture, plastic washer close to original cover, spacer, bracket and bolt.
- 3) Tighten the screws, positioning the brackets more or less in right way
- 4) brackets are free to move a little bit in any case, so they centering themselves with fixing points on screen
- 5) Put the screen and tight the screws with nylon black washer provided